



FILE FOR

RAPID PROTO


- SUPPRESS

HOLES

- ADD .5mm

MACH STOCK

ON PLUG BOSSE

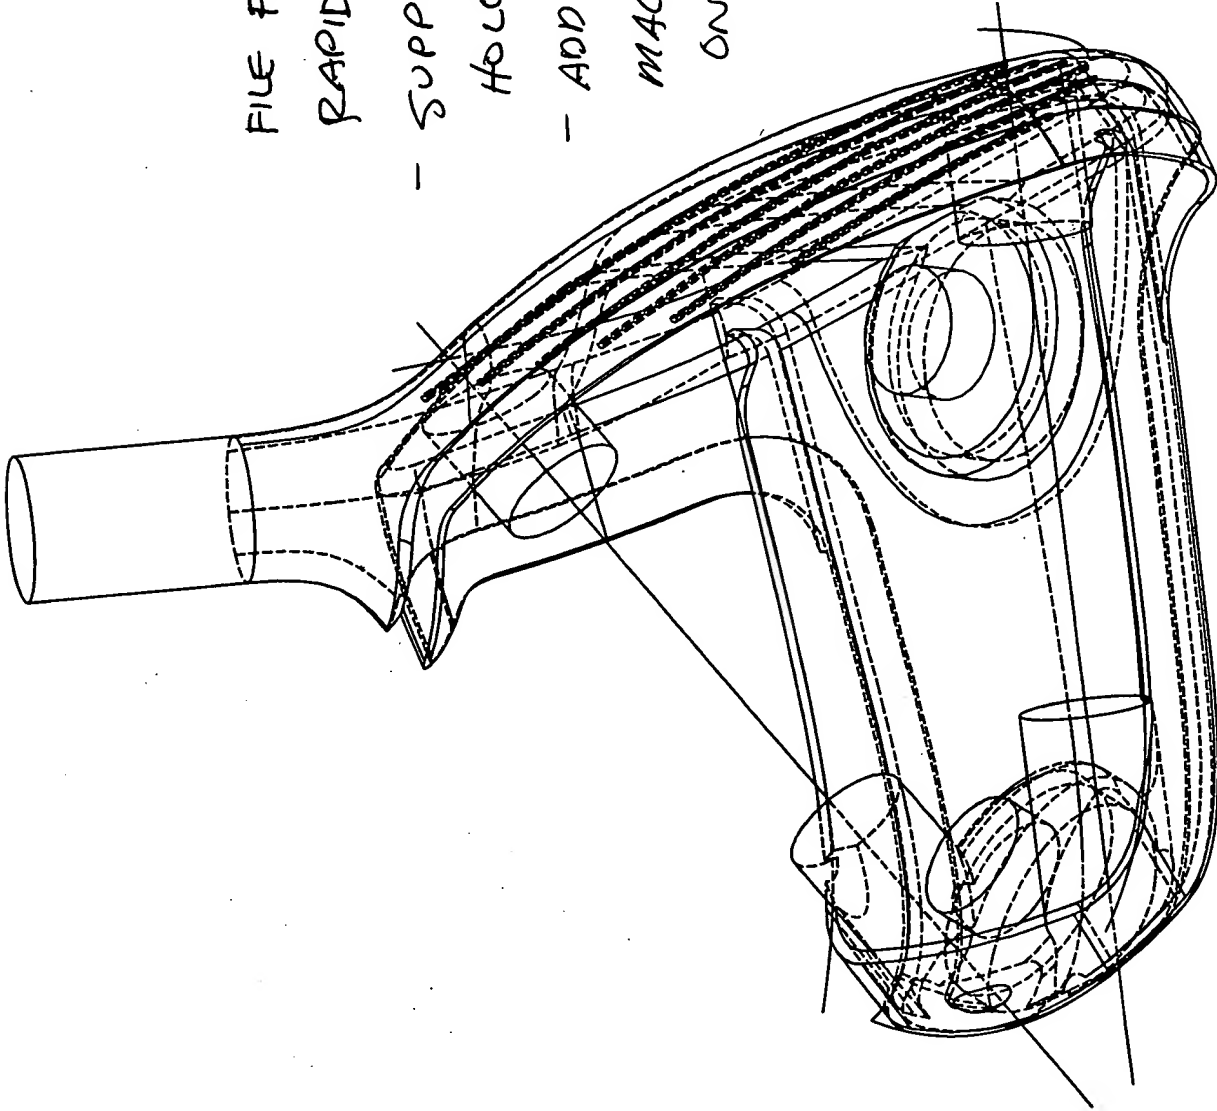

REVISED